# **TDEMI 6G**

- 4000x faster than conventional EMI receiver
- Measurement according to EN55022
- Analysis of Wi-Fi, Bluetooth



The TDEMI 6G covers the complete frequency range from 9 kHz to 6 GHz and is especially designed for the measurement of multimedia equipment, IT equipment, consumer electronics and devices for telecom applications. By the spread use of electronic systems and wireless communication systems the spectrum up to 6 GHz is more and more dense occupied by various services. Thus it is getting more and more important to reduce the overall testing time during EMC measurements for product certification as well as product development. As EMC tests are critical during the early design phase of a product fast and reliable testing is mandatory to save money and to make later product changes obsolet. By the weighted spectrogram mode, which is real-time displaying the emission over time, an excellent tool is provided for detection of potential EMI sources and investigations of EMI reduction methods. The weighted spectrogram mode is available in all TDEMI Measurement Systems and allows to measure and record frequency bands up to 162.5 MHz in a fully gapless manner. For evaluation peak, average and rms detectors are available. This tool provides a novel method to investigate instationary and intermitting signals.

The pioneering technology of the TDEMI and the achieved reduction of test times up to a factor of 4000 makes the receiver mode of the TDEMI most suitable for extremely fast measurements with excellent accuracy. The test results can be used for preinvestigations as well as for full compliance

measurements. With the optional report generator test protocols can be generated automatically. The measurement results can be evaluated according to the appropriate standard, e.g. CISPR 16-2-1 and CISPR 16-2-2.

With its already built-in low-noise pre-amplifier the noise floor above 1.15 GHz is typically below 3 dBµV (1 MHz IF bandwidth, average detector) which is lower than the noise floor of a state-of-the-art superheterodyne EMI receiver. The TDEMI uses an auto attenuator in order to set up the optimum attenuation. Further an overload indication comes with the TDEMI instrument.

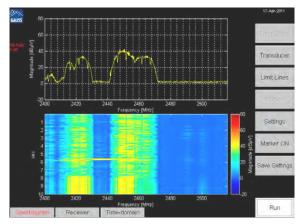


Fig. 27 – **Measurement of Wi-Fi activity** around 2.4 GHz. Lower part shows the changes of the emissions over the last 10 s recorded by the TDEMI

## **TDEMI 6G Specifications**

## FREQUENCY RANGE

9 kHz - 6 GHz

 REFERENCE (OCXO)

 Aging
 < ± 3.5 ppm / 15 years</td>

 Temperature Drift (0 .. 60° C)
 ± 1 x 10e-8

 SSB Phase Noise (1 Hz BW)
 1 Hz
 -95 dBc/Hz

 (typ. @ 12.8 MHz)
 10 Hz
 -120 dBc/Hz

 100 Hz
 -140 dBc/Hz
 1 kHz

 1 kHz
 -145 dBc/Hz

## RECEIVER MODE (CISPR Standard)

### IF Bandwidth 200 Hz Band A

IF Filter: Gaussian Shaped Filter, Specifications according to CISPR 16-1-1, Bandwidth Deviation < 10 % Detector Modes: Peak, Quasi-Peak, Average, RMS, CISPR-AV Displayed Average Noise Level (Input Level < 85 dBµV Sinus): < 0 dBµV (typ. -3 dBµV) Measurement at about 700 Frequencies in parallel Frequency Step < 100 Hz

#### IF Bandwidth 9 kHz

IF Filter: Gaussian Shaped Filter, Specifications according to CISPR 16-1-1, Bandwidth Deviation < 10 % Detector Modes: Peak, Quasi-Peak, Average, RMS, CISPR-AV Displayed Average Noise Level (Input Level < 65 dBμV Sinus): < -15 dBμV (typ. -19 dBμV) Measurement at 4096 Frequencies in parallel Frequency Step < 400 Hz

## IF Bandwidth 120 kHz

IF Filter: Gaussian Shaped Filter, Specifications according to CISPR 16-1-1, Bandwidth Deviation < 10 % Detector Modes: Peak, Quasi-Peak, Average, RMS, CISPR-AV Displayed Average Noise Level (Input Level < 65 dBµV Sinus): < -3 dBµV (typ. -6 dBµV) Measurement at 1024 Frequencies in parallel Frequency Step < 800 Hz

## IF Bandwidth 1 MHz

IF Filter: Gaussian Shaped Filter, Specifications according to CISPR 16-1-1, Bandwidth Deviation < 10 % Detector Modes: Peak, Average, RMS, CISPR-AV Displayed Average Noise Level (Input Level < 65 dB $\mu$ V Sinus): < 6 dB $\mu$ V 1 MHz – 1 GHz < 8 dB $\mu$ V 1 GHz – 1.15 GHz < 3 dB $\mu$ V (< 6 dB $\mu$ V with SW – UG) 1.15 GHz – 6 GHz Measurement at 128 Frequencies in parallel

WEIGHTED REAL-TIME SPECTROGRAM

Frequency Step < 800 Hz

Weighted Spectrogram Mode Peak, Average, RMS Time-domain Fully gapless 158 kHz for 120 kHz Frequency Step 1.2 MHz for 1 MHz Frequency Step Interpolation 40 kHz for 120 kHz 300 kHz for 1 MHz Frequency Span > 150 MHz IF Bandwidths CISPR 200 Hz, 9 kHz, 120 kHz, 1 MHz Minimum Time Step 50 ms

## TIME-DOMAIN ANALYSIS (RF)

Bandwidth 1 GHz
Sampling Rate 2.6 GS/s
Acquisition Memory 32000 Samples

## ABSOLUTE MAXIMUM RATINGS (ATTENUATION 0 dB)

Maximum DC Input Level, Pulse 6 V RF-CW Signal 120 dBμV INDICATION (ATTENUATION 0 dB)

Maximum DC Input Level, Pulse 5 V RF-CW Signal 65 dBμV

#### ATTENUATOR

0 - 75 dB, 5 dB Steps, Auto Attenuation

max. Input Power for Attenuation > 15 dB: 1 W CW

INTERMODULATION, NONLINEARITIES

CW Signals: Two Tone  $$<$-40~dB (typ. -53~dB)$ 
Harmonics (> 40~dB<math display="inline">\mu$ V, > 1 MHz) <\$-40~dB (typ. <-50~dB)\$ 
Inherent Reception Points <math display="inline"><\$-40~dB (typ. <-50~dB)\$ 
Total Dynamic Range (120 kHz IF Bandwidth) <math display="inline">> 140 dB

## INHERENT RECEPTION POINTS (ATTENUATION 0 dB)

Inherent Reception Point 1/4 ADC Sampling Rate: << 25 dB $\mu$ V (using Multi-sampling < -15 dB $\mu$ V) Further Inherent Reception Points << 5 dB $\mu$ V (using Multi-sampling < -15 dB $\mu$ V)

## MEASUREMENT TIME

1 μs – 60 s (Average, RMS)

 $1~\mu s-infinite~(Peak,~Quasi-Peak,~CISPR-Average,~CISPR-RMS-AV~(Option))$ 

## MEASUREMENT ACCURACY

Sinusoidal Signals (9 kHz - 1 GHz) ± 1 dB Sinusoidal Signals (1 GHz - 6 GHz) ± 2 dB

Pulses according to CISPR 16-1-1

## RF INPUT

50 Ohm

VSWR < 3.0 (typ. 2.0), 1 GHz - 6 GHz

VSWR < 1.2 typ., 9 kHz - 1 GHz, with 10 dB Attenuation

## REMOTE CONTROL, INTERFACES

Remote control command set according to SCPI Standard Ethernet/LAN, USB, RS232, GPIB (Option GPIB-UG), PS/2, VGA, HDMI, Audio

## **DISPLAY, USER INTERFACE**

Resolution 800 x 600 pixels, 8.4", True Color (16.78 Mio. colors) Touchscreen

## PC

Intel Core i, 2 GB RAM, 120 GB Hard Disk or higher Operating system: Windows XP or Windows 7

## POWER SUPPLY

230 V +/-20%, 50 Hz or 110 V +/-10%, 60 Hz

## WEIGHT

ca. 20 kg

MAIN OPTIONS	
PRE - UG	Preselection Band A
SW - UG	Preselection Band B
MIL/DO - UG	Frequency Extension down to 10 Hz, IF Bandwidths 10 Hz, 100 Hz, 1 kHz, 10 kHz, 100 kHz, 1 MHz
LISN - UG	Controller for Measuring Accessories (TTL, 5V)
LISNCable - UG	Customized Control Cabel for Accessories, e.g. LISN
TG - UG	Carrying Handle
PC - UG	Powerful multicore processor (Intel Core i or com-
	parable) for advanced computing power, doubled
	hard disk capacity, doubled RAM size
KB - UG	Compact Keyboard incl. Touchpad
RG - UG	Report Generator
CAL - UG	Manufacturer Calibration with Certificate
CALD - UG	DAkks Calibration with Certificate
CLICK - UG	Click Rate Analyzer, fully integrated
SLIDE - UG	Software for Disturbance Power Measurements